

Acrylic Floor Maintenance For Concrete

A period of approximately 72 hours is required for optimum hardness to be achieved.

The floor should be maintained on a regular basis by vacuuming and cleaning in the following manner:

To bucket of warm water, add recommended amount of “Tough Green” cleaner (or any low ph. cleaner), and mop floor with a microfibre mop. The floor should be damp for the shortest time possible. This will leave the floor clean & streak free. This simple cleaning should be carried out as required to keep the floor looking its best. The floor can also be Buffed using a white buffing pad on a straight line-buffing machine (as per vinyl floors).

Avoid cleaning with any other products as this may cause rejection of coating when maintenance is required.

CAUTION: Concrete floors may be slippery, particularly when wet, please take care as no responsibility is accepted.

Do not use any buffing type machine or product other than specified as any type of abrasive cleaner will dull the surface.

Periodical Maintenance

The surface of the coating will wear over time. To avoid costly stripping and recoating, apply a maintenance re-coat especially in high traffic areas.

Simple Tips

- Fit protective pads to chairs & tables.
- Castor legs should be fitted into castor cups.
- Use a dry mop regularly.
- Avoid direct heat from freestanding heaters.
- Spills should be cleaned up straight away to avoid penetration or damage.
- Door Matts recommended at all doors.
- When washing your floor always leave the kitchen until last.

Please contact us to purchase Microfibre Mop Refills and “Tough Green” cleaner.